



Installation Instructions: Detachable Fairing: Yamaha Stratoliner


Tools Needed:


3/8 Drive Socket Set Allen Wrench Set Phillips Screwdriver Wire Cutters Wire Strippers

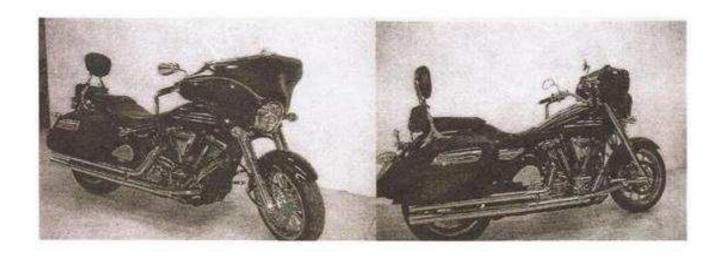

- 1. Loosen four bracket mounting screws around headlight.
- 2. Remove top windshield mounting bolt.
- 3. Remove bushing from bolt and add 5/16 washer, keep existing washer in place.

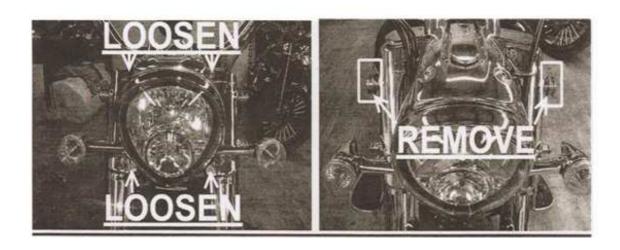


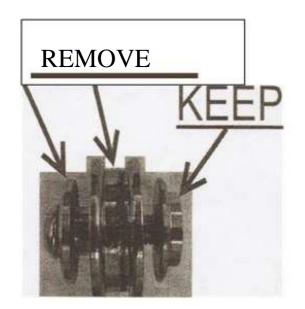

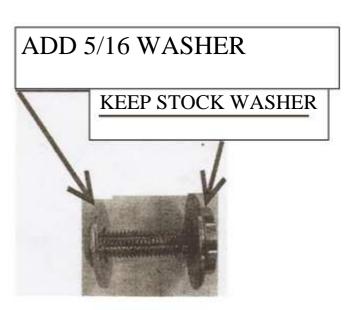



4. Replace the windshield mounting bolts leaving a gap to slide fairing bracket. If you find that the nut spins on the inside, try holding a screwdriver or knife to a part of the nut. The nut is knurled and will catch easily.

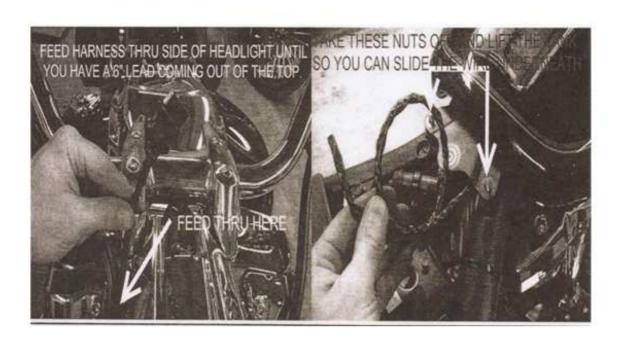

5. Route the quick disconnect harness. Run harness thru headlight area (make sure you leave enough slack at the forks to accommodate turning without underneath tank ending under the seat at the battery.

binding), feed

- 6. Feed wire harness(es) toward battery. Attach connectors as shown below. Then make connections; Yellow wire goes to positive battery terminal through fuse holder. Black goes to negative battery terminal. Red goes to brown/blue ignition turn on wire.
- 7. For Amp Wiring Harness; Red wire goes to positive battery terminal through fuse holder; Black wire goes to negative battery terminal.



- 8. Locate the brown/blue ignition wire(pictures above are a red/grey wire to demonstrate). Attach supplied yellow T-tap connector. The RED wire then connects to this T-tap. Note: When connecting the RED wire to the T-tap connector, ensure the male spade is pushed into the T-tap and not pushed off to the side.
- 9. Make sure nuts are back on tank bolts and all wiring is 'adjusted as to not be pinched when seat is installed.









- 10. Place and rest fairing bracket on bottom windshield mounting bolt.
- 11. Plug in pigtail harness and all other harnesses you may have (stereo, USB, amplifier), tuck up into the fairing. Slide fairing onto lower rubber grommets.
- 12. Slide fairing brackets onto top windshield mounting bolts, sliding between washers.
- 13. Tighten bracket bolts. Again, if you find the nut spins on the inside, hold a knife or similar item to the nut to prevent from spinning. This only has to be done until the nut catches; then it should tighten easily.