



**Installation Instructions:  
Detachable Fairing:  
Indian Chief Vintage**




1. Remove windshield from motorcycle. Remove rubber protective covers from windshield brackets and install onto lower portion of fairing brackets
2. Remove spotlight with 14mm wrench and blinker with 6mm allen.



3. Install relocation brackets with the provided 3/8 X 1" bolt and Nylok® nut as shown. Reattach spotlight.





4. Remove side covers to access side seat mounts use 6mm to remove bolts. Use 5mm to remove rear seat mount

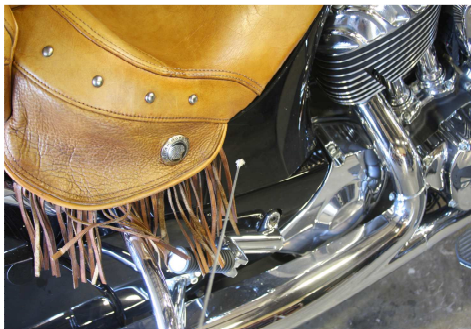


5. Remove ECM mounting bolt with 5mm Allen and lift it up and out of the way to expose battery



6. Run a fishing tape or line to allow the provided harness to be pulled through. Start in front of bars on throttle side and route down the side of the neck, under the tank coming out near battery.

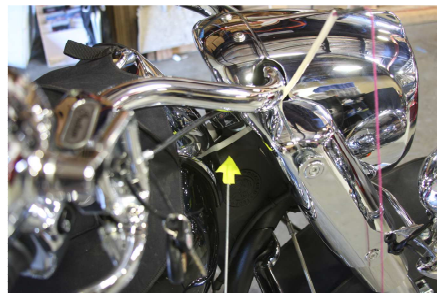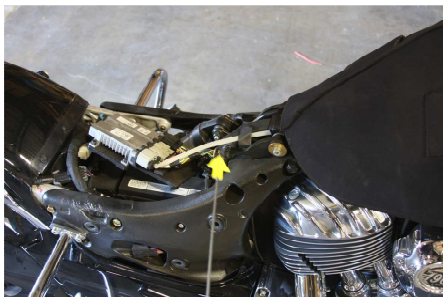


7. Connect wires as follows: Red - Crimp provided in line fuse to wire and attach to positive side of battery **\*\*do not install fuse at this time\*\***. Black - Crimp provided ring terminal to line and attach to negative side of battery. Blue - locate wire that is powered only with the ignition on and attach the provided t-tap to the wire. Crimp male spade to blue wire and connect to the t-tap.

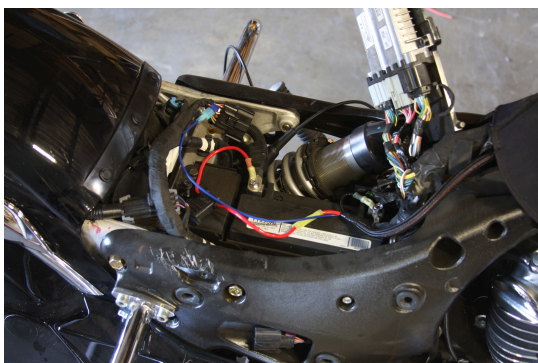

8. Fairing will install similarly to the windshield that was removed. Position lower portion of brackets onto mounts. **\*\*Take this time to connect all quick connects\*\*** Ensure that locking tabs are up so that fairing can be rotated toward s tank into position



9. Lower locking tabs into place and install 8/32 X 1/2" screws and Nylok(s)® to secure fairing.

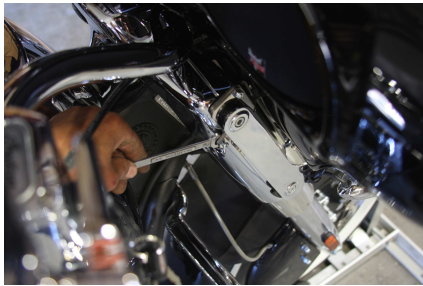

10. Double check all connections and fasteners and install provided 25 amp fuse at this time.
11. Power up system to ensure everything is functioning correctly. If everything checks out reinstall seat and side covers.

Enjoy your new Dragonfly Cycle Concepts fairing!!