



## **Tour Pack Speaker Pod Install Instructions**


### **Tools Needed:**

- 7/16" Socket**
- 3/8" Drill Bit**
- 3/16" Drill Bit**

### **Installation steps:**

1. Place templates on tour pack.
2. Drill the three larger holes indicated on the template using a 3/8" drill bit, then the smaller holes using a 3/16" drill bit.
3. Cut a hole in the vinyl for the speaker approximately 1/4 inch inside the speaker hole opening.  
(in order to keep the vinyl tight, we do not pre-cut this hole)
4. Attach pod using 1" long, 1/4" hex bolts and washers.
5. Attach speakers with the bolts provided with the speakers.
6. Wire to your motorcycle using your manufacturer's specifications

LH

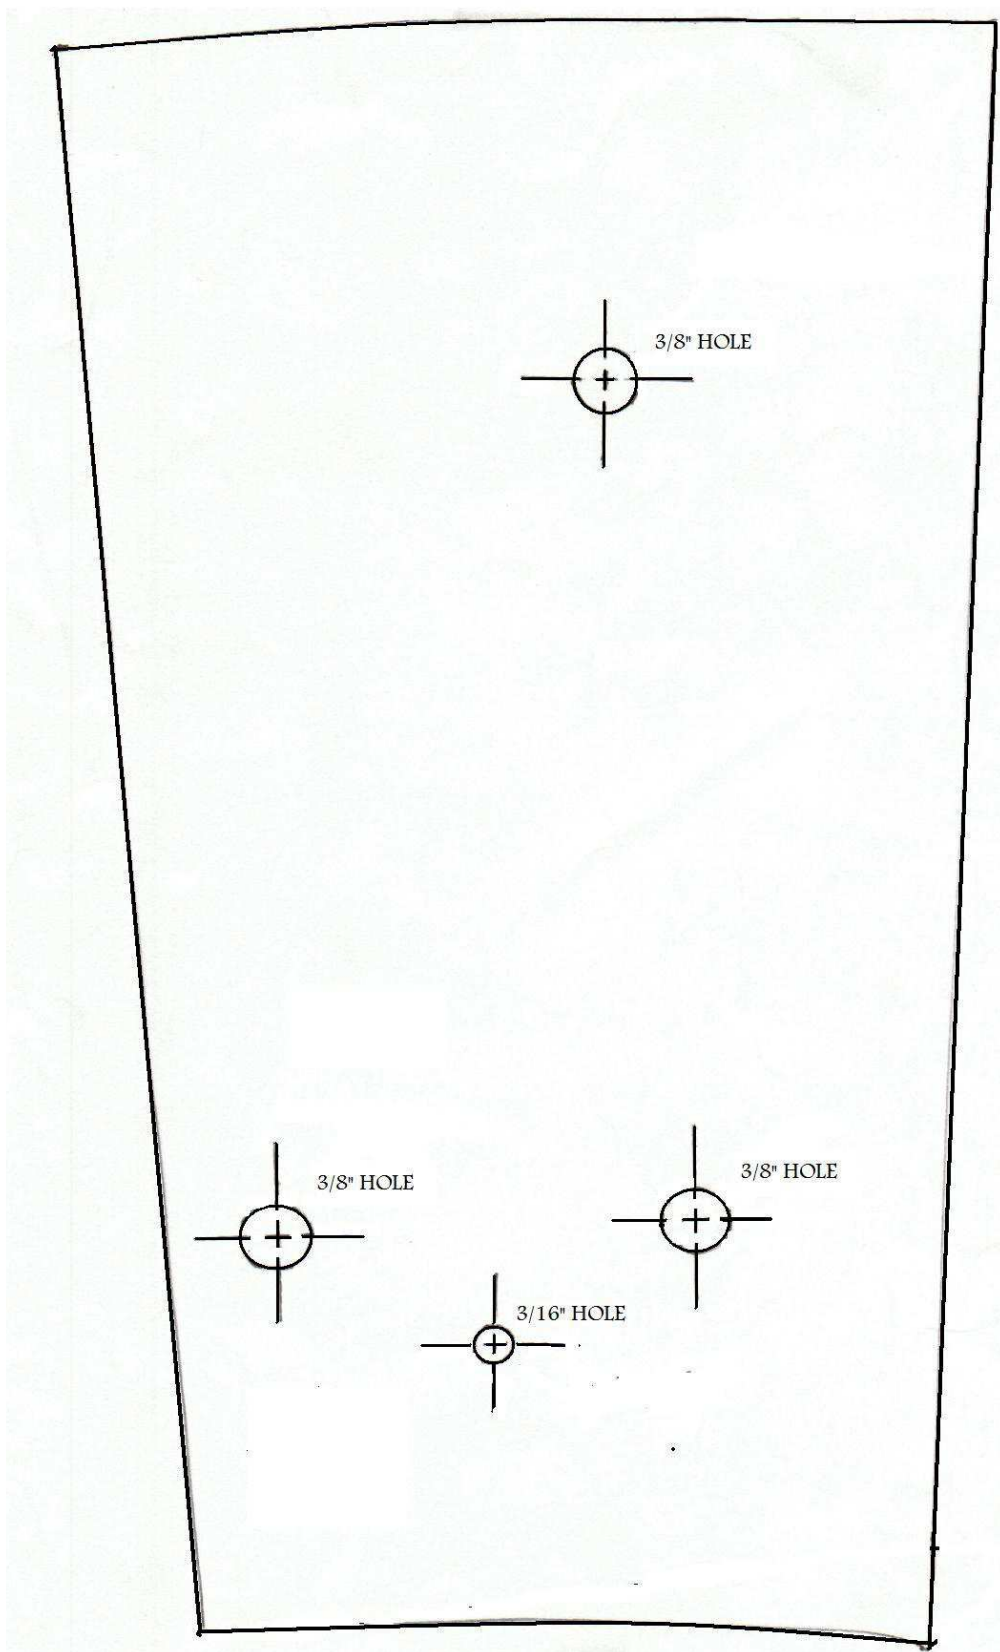

RH

